 


# ROAD MAP

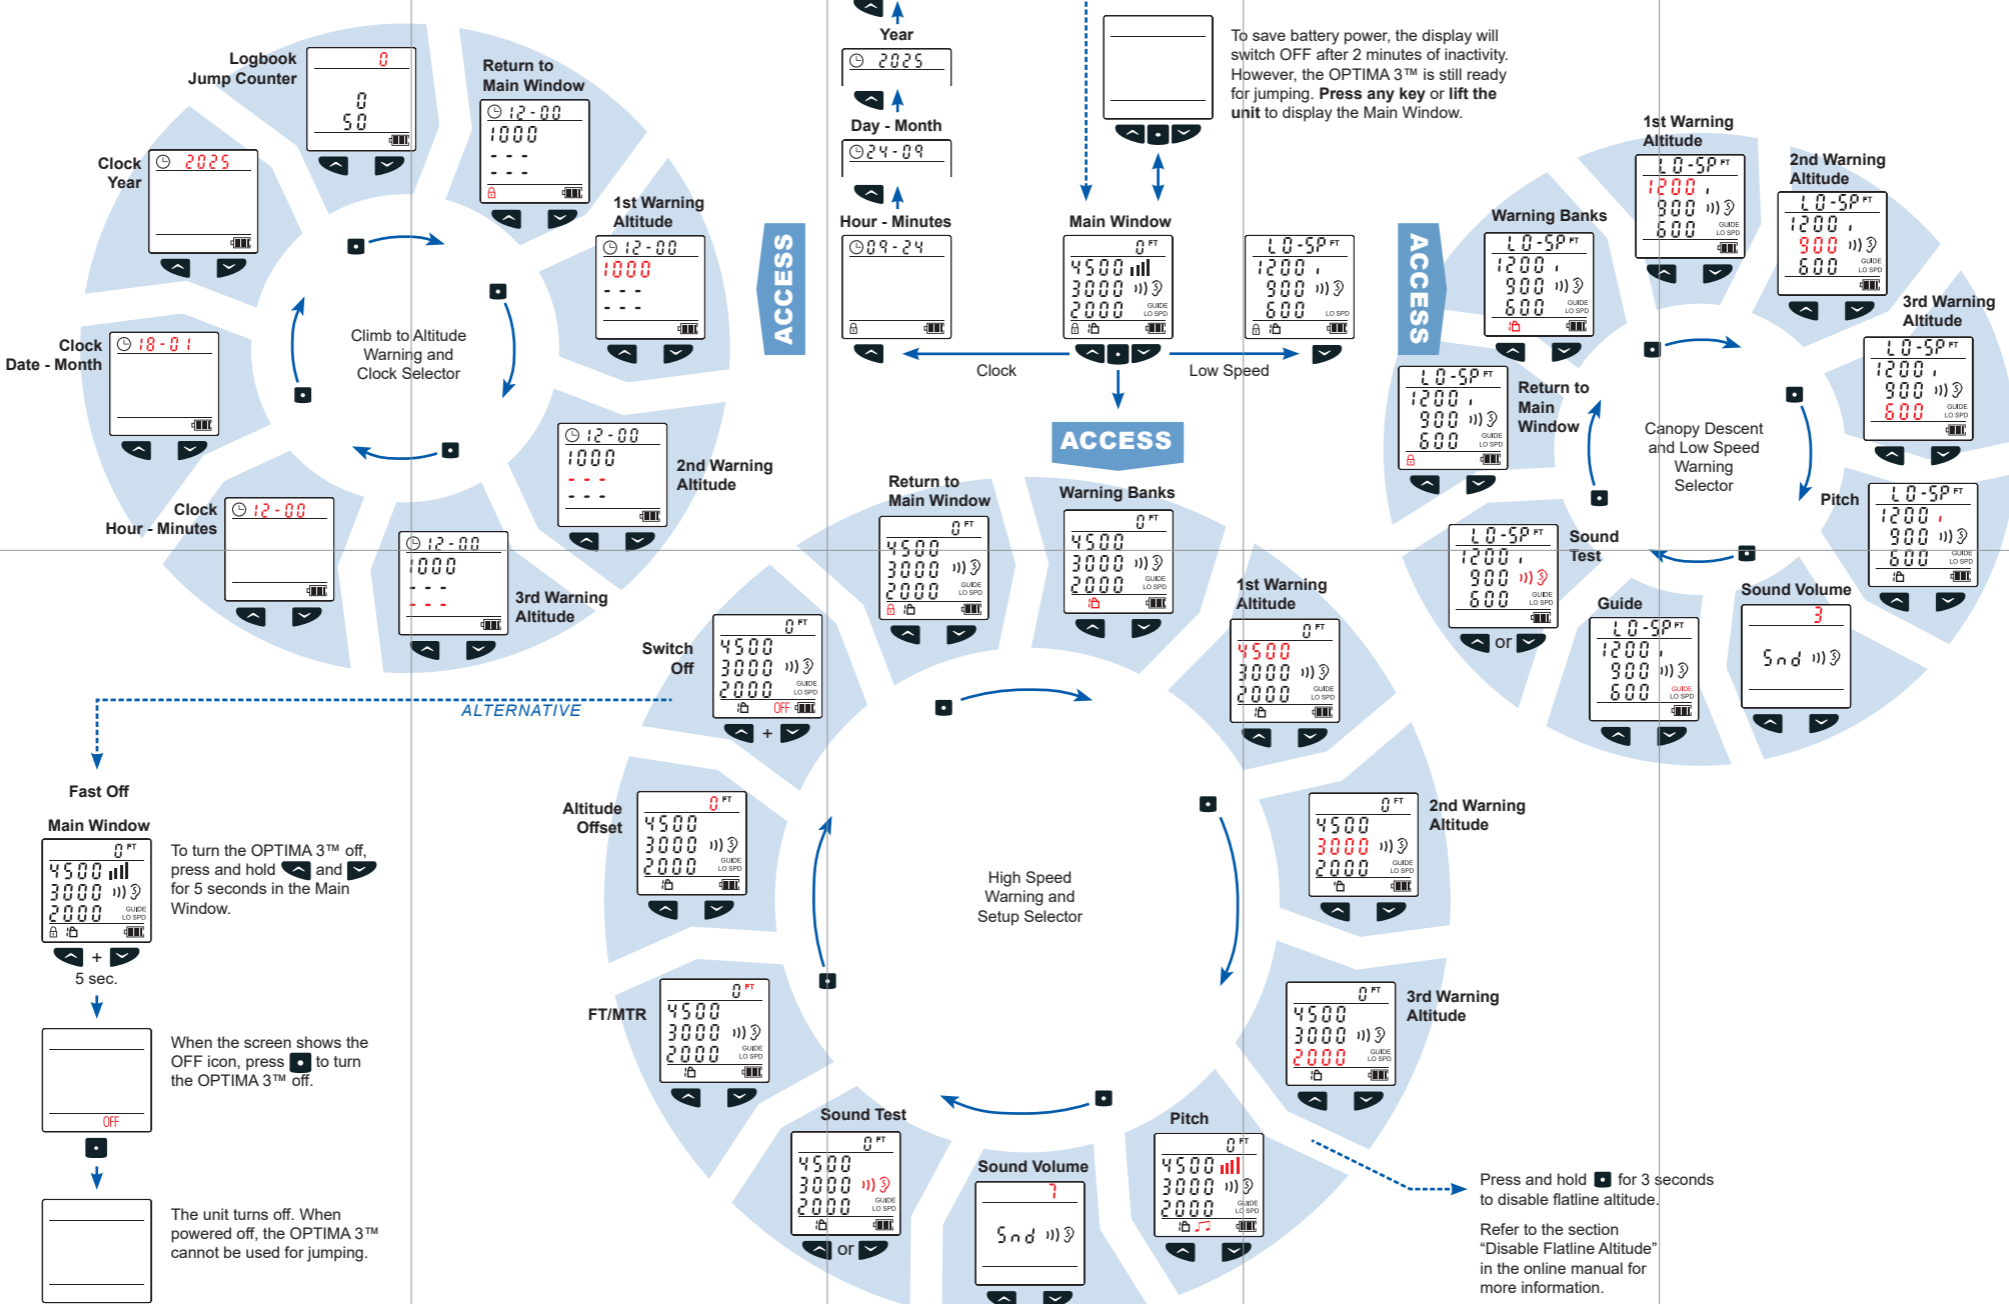

## ACCESS

- 1 Press and release the **mode** button - the lock icon turns off
  - 2 When the lock icon reappears, immediately **press and hold** the **mode** button - the lock icon turns off again
  - 3 When the lock icon appears again, **release** the **mode** button - The OPTIMA 3™ is now in **ACCESS** mode.
- Note: The OPTIMA 3™ exits ACCESS and returns to the Main Window if no button has been pressed within 5 seconds. ALL functions (except Power ON) can be performed ONLY when OPTIMA 3™ is in ACCESS mode.




The OPTIMA 3™ has been powered OFF prior to shipping from our factory. To turn the **power ON**, press and hold any key until the unit beeps, then release the key.

To save battery power, the display will switch OFF after 2 minutes of inactivity. However, the OPTIMA 3™ is still ready for jumping. **Press any key or lift the unit** to display the Main Window.

### Using the OPTIMA 3™ with the JumpTrack App.

- 1 Download and install the JumpTrack App from App Store or Google Play
- 2 Make sure Bluetooth® is activated on your phone.
- 3 Press and hold the mode button for 2 seconds to enable Bluetooth® pairing on your OPTIMA 3™.

When the Bluetooth® icon flashes in the display of your OPTIMA 3™, your altimeter is ready to pair.

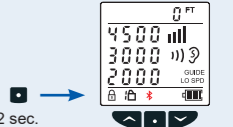

- 4 Pair your device in the JumpTrack App and not from the Bluetooth® settings on your phone.

In the App, go to **Altimeters > Add altimeter**. From the list of available altimeters find your device and press the **Connect** button.

- 5 Your OPTIMA 3™ is now connected.

Note: ACCESS is disabled for all settings while connected to JumpTrack via Bluetooth®.

Note: To enable Double Tap Bluetooth® activation, hold the mode button for 10 seconds. Enable or disable TAP using or , and press to save the setting. With Double Tap enabled, firmly double tap the front or back of the case of your OPTIMA 3™ to enable or disable Bluetooth®.

CE FC IC R 201-170920  
OPTIMA 3™ • REV. 1.0, MARCH 2025

**WARNING**

This Road Map does not replace the OPTIMA 3™ Manual nor releases the user from the obligation to comply with the contents of the OPTIMA 3™ Manual.



 
**Fast Off**

**Main Window**

To turn the OPTIMA 3™ off, press and hold and for 5 seconds in the Main Window.

When the screen shows the OFF icon, press to turn the OPTIMA 3™ off.

The unit turns off. When powered off, the OPTIMA 3™ cannot be used for jumping.

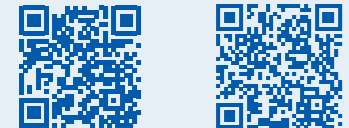

Visit [LBAltimeters.com](http://LBAltimeters.com) for manual and support

Instructional videos and YouTube channel

Press and hold for 3 seconds to disable flatline altitude.

Refer to the section "Disable Flatline Altitude" in the online manual for more information.



Apple, the Apple logo and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android and Google Play are service marks of Google Inc.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

**Radio transmitter:**  
Maximum output power: 4dBm  
Operating frequency: 2360-2500 MHz

Hereby, LARSEN & BRUSGAARD declares that the radio equipment type OPTIMA 3™ is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.lbaltimeters.com](http://www.lbaltimeters.com)

OPTIMA 3™ complies with the applicable requirements of FCC Rule Part 15. RESPONSIBLE PARTY located in the United States: Testing Partners LLC, 18200 SR 306, Chagrin Falls, OH 44023, [info@testingpartners.com](mailto:info@testingpartners.com)