





# MATERIALS NEEDED:

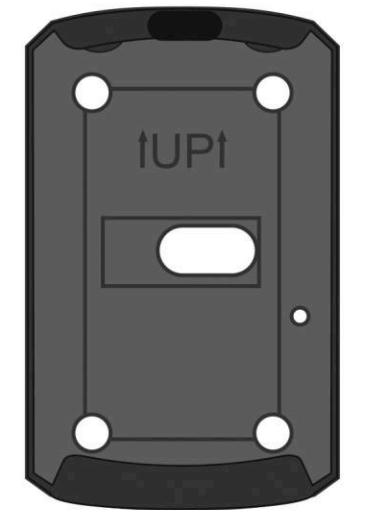

PRO-TRACK/PRO-DYTTER HELMET CLIP



ALTIMETER RUBBERBANDS



ZIP TIES



VISO II ALTIMETER POCKET

**TOOLS NEEDED:**

- DREMEL TOOL
- SCISSORS OR X-ACTO KNIFE
- NEEDLE NOSE PLIERS



L&B VISO TOOL



OPTIMA II OR SOLO II

**NOTE:**  
PRO-TRACK/PRO-DYTTER HELMET CLIPS & VISO ALTIMETER POCKETS CAN BE PURCHASED THROUGH YOUR DEALER OR AT [HTTP://WWW.L-AND-B.DK](http://www.l-and-b.dk) VIA OUR ONLINE WEBSTORE!

# DIRECTIONS:

## STEP 1 MODIFY HELMET CLIP



Should look like this when finished

Use Dremel tool to make a 1/2" hole where shown, through Pro-Track Helmet Clip so that speaker on your Solo or Optima is not obstructed.


## STEP 2 MODIFY VISO<sup>®</sup> ALTIMETER POCKET



Should look like this when finished

Use scissors or x-acto knife to trim both long side of the VISO Altimeter Pocket. Leave about 1/16" of a lip on the sides. DO NOT trim the top and bottom shorter sides.

## STEP 3 INSERT SOLO OR OPTIMA IN HOLDER

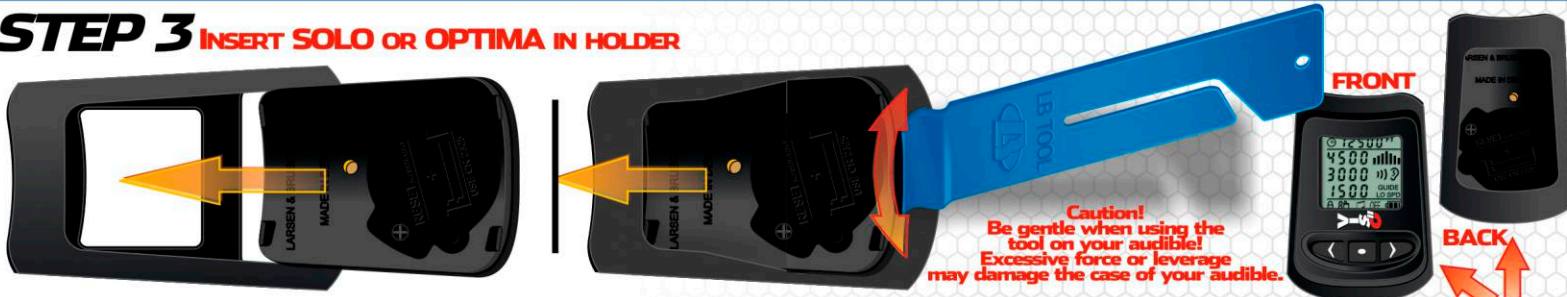


**Caution!**  
Be gentle when using the tool on your audible!  
Excessive force or leverage may damage the case of your audible.

Should look like this when finished

Push audible ALL THE WAY INTO THE BACKSIDE opening until it is against the inside of the pocket. Use the L&B Tool to gently pry the edges of the pocket around the audible until it is completely inside.




## STEP 4 PREPARE TO INSTALL HELMET CLIP

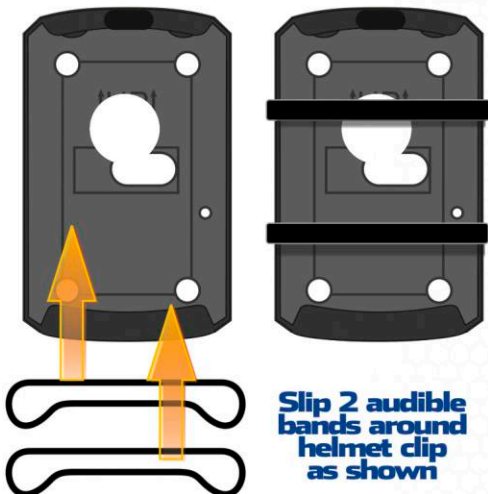

Slip 2 audible bands around helmet clip as shown

## STEP 5A SECURE HELMET CLIP TO HELMET

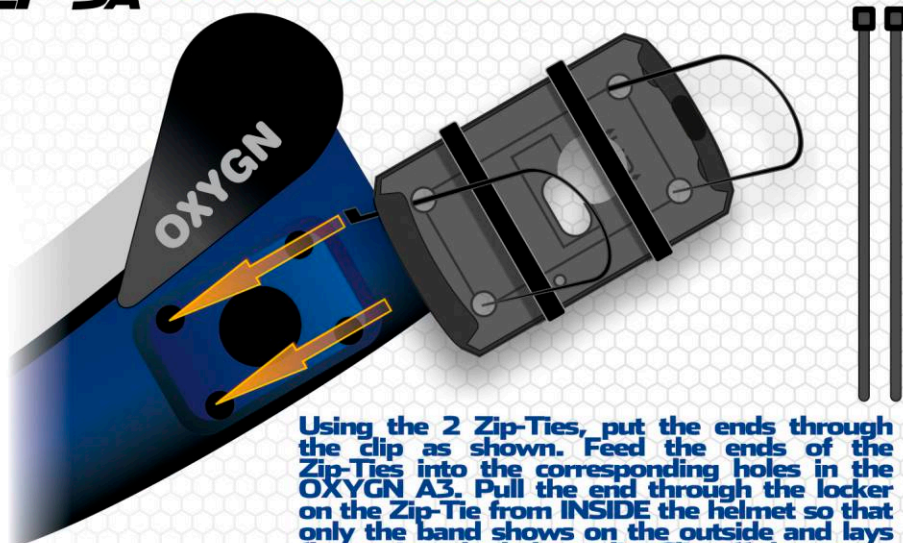

Using the 2 Zip-Ties, put the ends through the clip as shown. Feed the ends of the Zip-Ties into the corresponding holes in the OXYGN A3. Pull the end through the locker on the Zip-Tie from INSIDE the helmet so that only the band shows on the outside and lays flat against the helmet clip. Clip off the excess Zip-Tie with scissors.

## STEP 5B SECURE HELMET CLIP TO HELMET

Should look like this when finished



## STEP 6 INSERT AUDIBLE WITH VISO POCKET IN HELMET CLIP

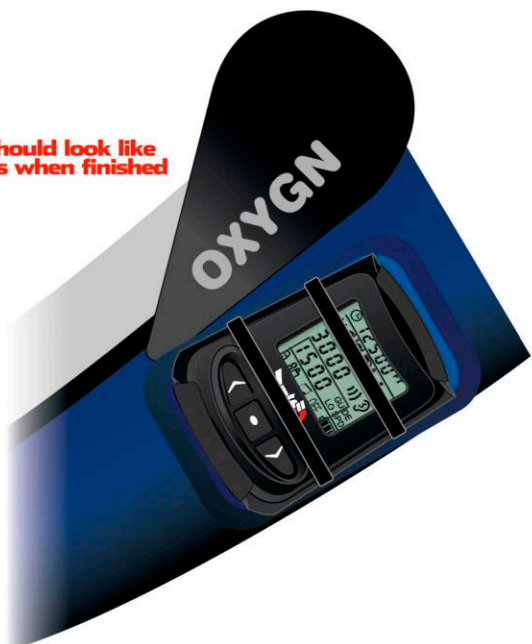


Fig. 1

Slip the pocketed audible through the 2 rubber bands and press end into clip so the edge of the pocket curls like in Fig. 2. Press the top side of the pocketed audible in the clip so that the edge of the pocket curls up like in Fig 2

## STEP 7 MAKE SURE AUDIBLE IS SECURE.

Should look like this when finished



## TIPS FLIGHT PERFORMANCE

- If the pocketed audible is too loose, foam tape can be used to take up a bit of space behind the audible in-between the clip and the pocket.
- Always make sure the audible's speaker has a direct line to the opening in the helmet.
- Check to make sure the rubber bands are not torn or missing before each jump.
- L&B is not responsible for the loss of your audible using this guide. We are providing this as a suggestive technique to mount your Solo, Optima, Solo' or Optima' in a Sky Systems OXYGN A3.
- Please use good judgement and take care of yourself and your equipment.



LARSEN & BRUSGAARD

LEDREBORG ALLE 28 | 4000 ROSKILDE | DENMARK | L-AND-B@L-AND-B.DK  
V: +45 46 48 24 80 | F: +45 46 48 24 90 | WWW.L-AND-B.DK